

WT41N0 Series

EMC Configuration and Accessories Guide

Designed to assist customers and partners with model and configuration guidance






WT41N0 Series

CONFIGURATION & ACCESSORY GUIDES are available on The Source and PartnerCentral

- Also see <u>www.zebra.com/wt41n0</u> and the WT41N0 Configuration and Accessories Guide
- All WT41N0 series accessories are compatible and backward compatible including: cradles, holsters and cables.

Find Product Information in the EMC
Product Portfolio on The Source
and PartnerCentral

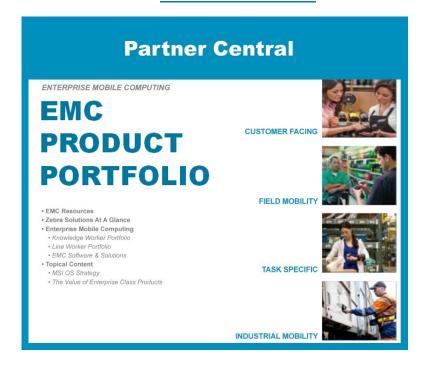



WT41N0 Series Configuration Matrix

CONFIGURATION OPTIONS:	WT41N0	OPTION	DESCRIPTION
Touch Screen	WT41N0-TXXXXXX	Т	Touch
	WT41N0-NXXXXXX	N	Non-touch
	WT41N0-VXXXXXX	V	Voice-only/No Display
Keypad Overlay	WT41N0-X1XXXXX	1	3 keys; voice device
	WT41N0-X2XXXXX	2	Double tap
Battery	WT41N0-XXSXXXX	S	Standard
	WT41N0-XXHXXXX	Н	High Capacity
OS Languaga & Custom	WT41N0-XXXXXEX	Е	English
OS Language & Custom	WT41N0-XXXXXJX	J	Japanese

PRODUCT ID:	TOUCH SCREEN	KEYPAD OVERLAY	BATTERY
WT41N0-N2H27ER	Non-Touch	3 keys; voice device	High Capacity
WT41N0-N2S27ER	Non-Touch	3 keys; voice device	Standard
WT41N0-T2H27ER	Touch	3 keys; voice device	High Capacity
WT41N0-T2S27ER	Touch	3 keys; voice device	Standard
WT41N0-V1H27ER	Voice-only/ No Display	Double tap	High Capacity

All currently available WT41N0 configurations include the following features:

- 1. WAN Radio: None
- 2. Memory: 512MB RAM/2GB FLASH
- 3. OS: Windows Embedded Compact 7 (CE)
- 4. RoHS: RoHS Compliant



WT41N0 Main Models



WT41N0-T2S27ER

Touch wearable with standard capacity battery



WT41N0-V1H27ER Voice only wearable

WT41N0

- Processor: Dual Core OMAP 4 @ 1GHz
- Operative System: Microsoft Windows Embedded Compact CE 7.0
- **Display:** 2.8" Color QVGA (WT41N0 only)
- Compatible with:
 - 1D or 2D ring scanners (including RS419 latest 1D laser technology with adaptive scanning)
- IP54
- **Drop Spec:** 4' drop to concrete
- Size: 142 x 93 x 26 mm
- Weight:
 - 320 g (1x battery)
 - 370 g (2x battery)



WT41N0 Data capture methods

RS419 1D Laser

Ring scanner with HP engine, can also be used in freezer environments:

RS419-HP2000FSR Ring scanner, to be used with the WT41N0 worn on the wrist.

RS419-HP2000FLR Ring scanner, to be used with the WT41N0 worn on the hip.

1D Laser





RS419-HP2000FSR Ring scanner with cable to wrist

RS419-HP2000FLR
Ring scanner with cable
to waist

RS507 1D/2D Imager

RS507 Configurations matrix:

OPTIONS	RS507-XX20000XXXX	DESCRIPTION
Imager Focus Method	RS507-IM20000xxx	SR focus imager
	RS507-DL20000xxx	DL focus imager
Battery	RS507-xx20000Sxxx	Standard Capacity Battery
	RS507-xx20000Exxx	Extended Capacity Battery
	RS507-xx20000Cxxx	Corded Adapter to WT41N0
Trigger	RS507-xx20000xTxx	Manual trigger
	RS507-xx20000xNxx	Without manual trigger for auto-triggering

1D/2D Imager



RS507-IM20000CTWR
Corded imager with trigger



RS507-IM20000STWR Imager with trigger and standard capacity battery

WT41N0 Accessories Guide





Step 1: Choose a charging method



Single Slot Cradle Kits:

CRD4000-110UES (US)

Includes: Single Slot Cradle CRD4000-1000UR, USB Cable 25-68596-01R, Power Supply PWRS-14000-148R, and US AC Cord 23844-00-00R.

CRD4000-110UES (INTL)

Includes: Single Slot Cradle CRD4000-1000UR, USB Cable 25-68596-01R and Power Supply PWRS-14000-148R. Must purchase 3 wire AC Cord separately.

Additional Accessories for Single Slot Cradle



25-68596-01R

USB Cable for the single slot cradle



PWRS-14000-148R

Power supply for single slot cradle: 100-240 VAC, 12VDC, 4.16A



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



25-85992-01R

4-way DC cable to connect four 4single slot cradles to power supply PWRS-14000-241R



RDUYS08220007

Adapter to connect USB hub, keyboard, or mouse to the single-slot cradle.



The single slot cradle can charge a WT41N00 and has a USB port. It allows to charge a spare standard or extended battery.



Step 1: Choose a charging method



4 Slot Cradle:

CRD4001-4000ER

4 Slot Ethernet cradle. Requires power supply PWRS-14000-241R, DC line cord 50-16002-029R and 3 wire AC cord.

4 Slot Cradle Kit:

CRD4001-411EES (INTL)

Includes: 4 Slot Cradle CRD4001-4000ER, power supply PWRS-14000-241R and DC line cord 50-16002-029R. Must purchase 3 wire AC Cord separately.

Additional Accessories for 4-slot Cradles



PWRS-14000-241R

Power supply for 4 slot cradles:90-264 VAC, 12VDC, 9A



50-16002-029R

DC cable provides power from the power supply to 4 slot cradles.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



25-85991-01R

"Y" Power cable, used to connect the 4 Slot cradle and a for slot battery charger SAC4000-4000CR to a single power supply PWRS-14000-241R.



21-86630-01R

Wall Mounting Bracket, used for mounting the 4 slot cradle on a wall.



Step 2: Choose battery / battery charging accessories

Spare Batteries



Standard Lithium Ion battery, 2330 mAh



BTRY-WT40IAB0H

Extended Lithium Ion battery, 4600 mAh

Accessories for battery chargers:



PWRS-14000-148R

Power supply for single and 4-slot battery chargers.



23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.





SAC4000-4000CR

4-slot battery charger. Uses power supply PWRS-14000-148R and 3 wire AC cord.

SAC4000-410CES (US)

Includes: Battery charger SAC4000-4000CR, power supply PWRS-14000-148R and AC line cord 23844-00-00R.

SAC4000-411CES (INTL)

Includes: Battery charger SAC4000-4000CR and power supply PWRS-14000-148R. Must purchase 3 wire AC Cord separately.



25-85992-01R

4-way DC cable to connect four 4-slot battery chargers to power supply PWRS-14000-241R



25-85991-01R

"Y" Power cable, used to connect the 4 Slot cradle and a for slot battery charger to a single power supply PWRS-14000-241R.



21-86630-01R

Wall Mounting Bracket, used for mounting the 4 slot battery charger on a wall.



Step 3: Choose carrying accessories

Wrist Mounting Accessories



SG-WT4023020-05R

Wrist mount with regular length arm straps.

SG-WT4023020-06R

Wrist mount with long length arm straps.



SG-WT4023221-03R

Regular arm straps, includes 8" and 11" straps



SG-WT4027050-01R

Arm sleeves (pack of 5)



SG-WT4023221-04R

Long arm straps, includes 13" and 16" straps



SG-WT4023021-02R

Replacement pad

Hip Mounting Accessories



SG-WT4021010-01R

Hip mount, to be used with the standard capacity battery.



SG-WT4026000-01R

Freezer pouch, for standard capacity battery, can be used wrist or hip mounted.



SG-WT4026000-20R

Freezer pouch, for extended capacity battery, can be used wrist or hip mounted.




11-08062-02R

Belt for hip mount or freezer pouch.



Step 4: Choose audio accessories

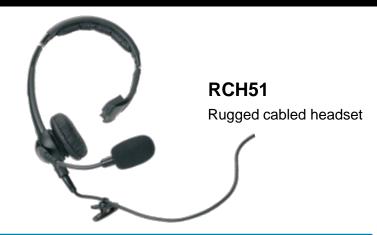

Headset Adapter Cables



25-114186-03R

Adapter cable with a coiled section fro WT41N0





Short adapter cable (4") for WT41N0 (wrist mounted)





Long adapter cable (19") for WT41N0 (hip mounted)

25-129938-02R

Training "Y" cable to connect two headsets to one WT41N0

Consumables



KT-126574-01R Replacement ear pads foam, (5 pk)



KT-126579-01R Replacement windsocks (5 pk)



KT-126580-01R Replacement earpads leatherette (5 pk)



KT-126581-01R Replacement

Replacement headbands (5 pk)



KT-126582-01R Replacement temple

Replacement temple pads (5 pk)



Step 4: Choose audio accessories





IHV Bluetooth Headsets

B250XT+ VXi Corp Bluetooth Wireless

Headset

Expressway II VXi Corp Bluetooth Wireless

Headset





Step 5: Choose accessories for RS419 ring scanner



RS419-HP2000FLR Ring scanner for WT41 hip mounted.

RS419-HP2000FSR Ring scanner for WT41 wrist mounted.

RS419 Ring Scanner:

RS419-HP2000FLR

Ring scanner to cable to waist-worn WT4X90 and WT41N0, with HP engine and freezer rating.

RS419-HP2000FSR

Ring scanner to cable to arm-worn WT4X90 and WT41N0, with HP engine and freezer rating.

Accessories for RS419 Ring Scanner



SG-RS419-TRGAS-01R

Replacement trigger assembly for ring scanner.



21-93022-02R

Short replacement finger strap for ring scanner (6")



SG-RS419-FGSTP-01R

Long replacement finger strap for ring scanner (7.8")



Step 6: Choose accessories for RS507 ring scanner



RS507-IM20000ENWR Imager without trigger and extended battery



RS507-IM20000STWR Imager with trigger and standard battery

RS507 with manual trigger:

RS507-IM20000STWR Imager with SR focus, manual trigger and

standard capacity battery.

RS507-IM20000CTWR Imager with SR focus, manual trigger and

corded adapter to the WT4X terminal.

RS507-IM200000TWR Imager with SR focus and manual trigger.

Requires battery (not included)

RS507-DL20000STWR Imager with DL focus, manual trigger and

standard capacity battery.

RS507-DL200000TWR Imager with DL focus and manual trigger .

Requires battery (not included).

RS507 without manual trigger:

RS507-IM20000SNWR Imager with SR focus and standard capacity battery. Without trigger for auto-triggering.

RS507-IM20000ENWR Imager with SR focus and extended capacity battery. Without trigger for auto-triggering.

Spare Batteries



KTBTRYRS50EAB00-01

Standard Lithium Ion battery, 970 mAh



KTBTRYRS50EAB02-01

Extended Lithium Ion battery, 1940 mAh

Charger Solutions



SAC5070-800CR

8 Slot battery charger for standard and extended batteries. Includes: power supply and US AC Line Cord 50-16000-182R.

SAC5070-801CR

8 Slot battery charger for standard and extended batteries. Requires power supply PWRS-0102246H54R and 2 wire line cord.



Step 6: Choose accessories for RS507 ring scanner

Replacement Straps and Buckles:



KT-STRPT-RS507-10R

Velcro straps, for manual trigger configurations (10 pk)



KT-STRPN-RS507-10R

Velcro straps, for trigger-less configurations (10 pk)



KT-STRP2-RS507-10R

Elastic straps for trigger or trigger-less configurations (10 pk)



KT-BKL-RS507-10R

Buckles for velcro straps, use two for trigger-less configurations (10 pk)



KT-BKLT-RS507-10R

Buckles for elastic straps, used with trigger configurations only. (10 pk)



KT-BKLN-RS507-10R

Buckles for elastic straps, use two for trigger-less configurations. (10 pk)

Replacement Triggers:



KT-CLMPT-RS507-01R

Replacement trigger swivel assembly.



KT-CLMPN-RS507-01R

Replacement strap holder, for trigger-less configurations.



KT-PAD-RS507-10R

Replacement comfort pads, to be used with manual trigger and trigger-less configurations (10 pk)

Corded Adapter:



ADPTRWT-RS507-03R

Corded Adapter for the RS507. It uses instead of the battery for serial interface to the WT41N0.